

New Zealand Finescale

1:64 NZR Bogie kits

These generic instructions cover all bogie kits. Parts may vary from the B60 bogies shown, but other types are similar.

Clean up etched bogie sideframes. If stretchers have them, fold the angles 90° (as shown). Fold bearing hangers 90° and reinforce sparingly with solder.

Glue/solder pinpoint bearings in place.

Clip in wheelsets and check free running.

Clean up cosmetic sideframes, making sure the areas that sit against the etched parts are flat.


If necessary, frames may be straightened by heating a few seconds in boiling water and then holding in shape until cool.

Glue sideframes in place at bearings and along top edge.

Clip bolster in place taking care not to put force on the printed sideframe details. This is best done by forcing the spigots on the sideframes into the bolster with a thumbnail.

Wheelsets can be removed if required by removing the bolster and gently flexing the bogie.

Stretchers for the brakes are also supplied for bogies with outboard brake shoes. Fold these 180°, solder and clip behind the brake shoes.

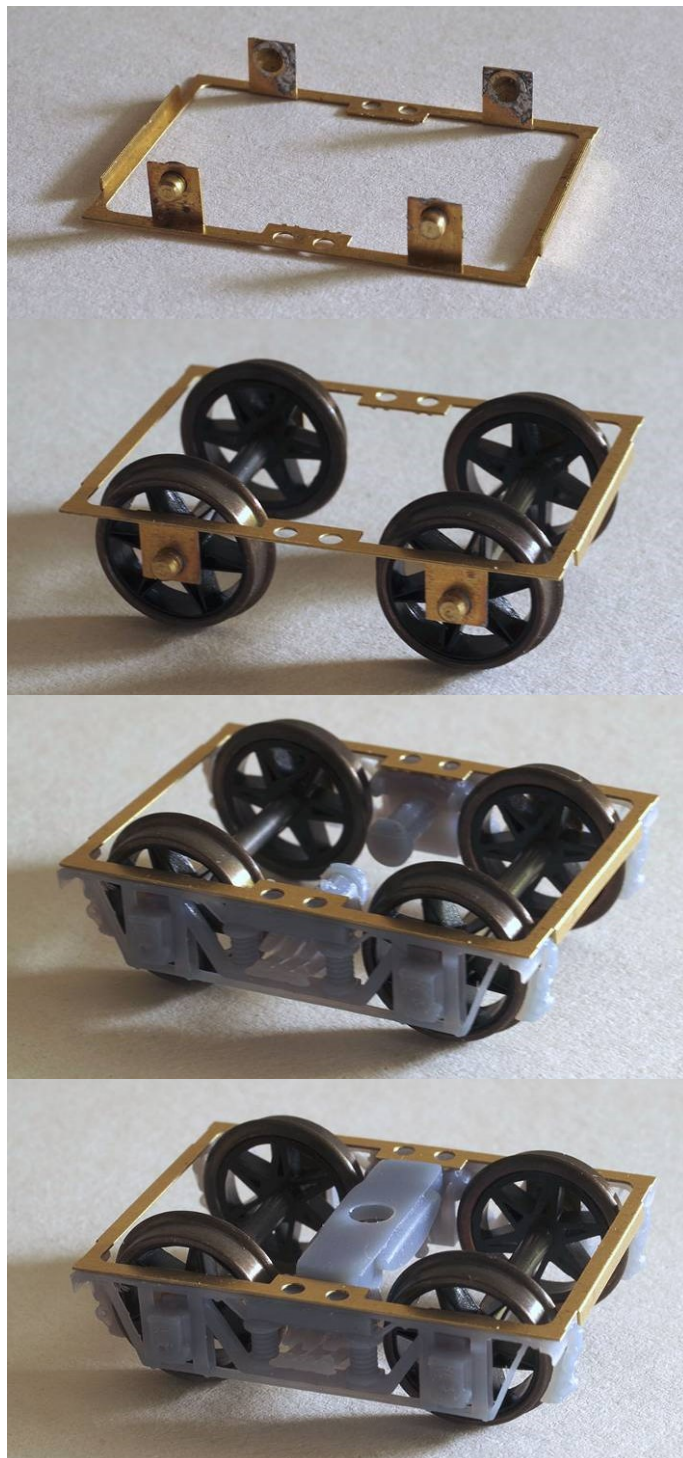

Fine Model NZR Parts and Kits in 1:64

nzfinescale.com